

# SPRINKLER GUIDE



---

Please reference the following guide to turn on your sprinkler system in the spring and winterize it in the fall.

New Leaf Landscape offers sprinkler maintenance services. Please contact our office for more information.

---

## Operation Instructions

### Inside Tap and Inside Backflow

#### Notes:

- Do not touch black plastic valves.
- Left to open, right to close. Use drain valve key provided.

#### Spring turn on:

- Close valve drain in basement or by water tap
- Open main valve on backflow preventer
- Close drain valve(s) outside
- Turn controller on in garage
- Check sprinkler system for any leaks or breaks

#### Fall winterizing:

- Close main valve on backflow preventer in basement or by water tap
- Open drain valve in basement or by water tap
- Open drain valve(s) on backflow preventer
- Turn off controller in garage

#### Instructions to adjust Hunter nozzles/rotors:

- <https://www.hunterindustries.com/support/adjusting-arc-hunter-pro-adjustable-nozzles>
- <https://www.hunterindustries.com/support/residential-rotors>